




1-800-282-2886


8 a.m. to 7:30 p.m. (CST), Monday - Friday 10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

www.eureka.com



## Vhat's in the carton

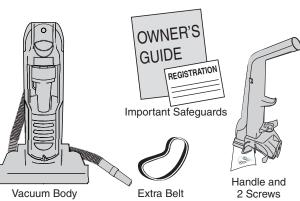

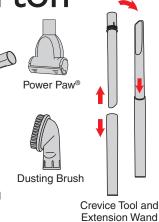


**SPECIAL FEATURES** Available on some models Bare Floor Nozzle and Wand Duster Chamber Self-Cleaning Duster Stair Hose




## Easy assembly




READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER. Moving parts! Make sure power switch is in OFF (O) position before plugging in power cord. Assemble the vacuum cleaner before using.

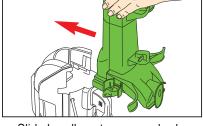

Slide handle onto vacuum body.

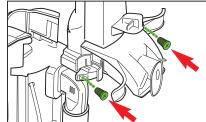


Tighten two screws.

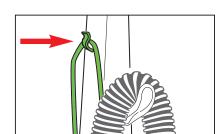


Push cord into cord retainer.



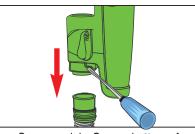


Some models: Secure bottom of duster chamber to hose retainer. Tighten with flat-head screw driver.

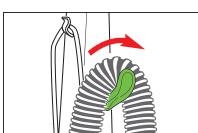


Place hose over hose hook.



Push end of hose into duster chamber. Place duster in chamber and snap into place.

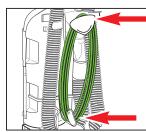

Wrap cord.

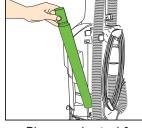

Place crevice tool & wand in front of hose.




Place dusting brush behind handle.




Snap Power Paw® onto handle.



## Get ready to vacuum

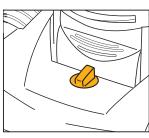


Adjust height for carpet or bare floor.

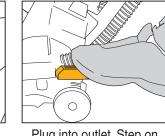


Plug into outlet. Step on handle release to lower handle into position.



Push power switch (I) on.

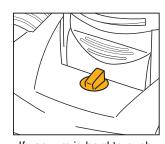

If vacuum is hard to push, raise carpet setting.

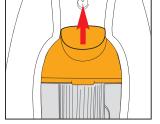

Lift latch to remove dust cup. Empty after each use.




push lever down 10 seconds.



Turn duster to extend. Push firmly to collapse

and turn to lock.

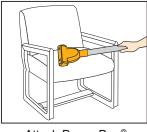

Attach Power Paw® to end of wand or hose for furniture and stairs.